



**Assembly and Operating Instructions for Outback®
Mayfair/Tungsten, Spirit/Titanium, Hooded Gas Barbecues**

EN (Europe)



Photographs are not to scale.
Specifications subject to change
without prior notice.



CE
0359



WARNING

- For outdoor use only. Not for commercial use.
- Read instructions before using the appliance. Failure to follow instructions could result in death, serious bodily injury, and/or property loss.
- Warning: accessible parts may be very hot. Keep young children away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas bottle after use.
- Any modification of the appliance, misuse, or failure to follow the instructions may be dangerous and will invalidate your warranty. This does not affect your statutory rights.
- Retain these instructions for future reference.
- Leak test annually, and whenever the gas bottle is removed or replaced.
- For Flare-up control please refer to the 'OPERATION' section of this manual.

FOR YOUR SAFETY

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open barbecue lid or hood.
4. If odour continues, discontinue use and contact your local dealer.

FOR YOUR SAFETY

1. Do not store or use petrol or other flammable vapours or liquids in the vicinity of this or any other appliance.
2. A gas bottle not connected for use shall not be stored in the vicinity of this or any other appliance.

Parts List

Quantities vary according to model purchased. Specifications subject to change without prior notice. For more details on hardware, please see 'Hardware Reference Diagram'.

	CODE	PART	QTY	Mayfair/Tungsten	Spirit/Titanium
HOOD	A1	Hood Handle	1	✓+▲	✓+▲
	A2	L/H Hood Handle Bracket	1	✓+▲	✓+▲
	A3	R/H Hood Handle Bracket	1	✓+▲	✓+▲
	A4	Hood (<i>Pre-Assembled to Body</i>)	1	✓+▲	✓+▲
	A5	Hood Panel	1	✓+	✓+
	A6	Heat Indicator and Nuts	1	✓+	✓+
BODY	B1	Barbecue Body	1	✓▲	✓▲
	B2	Burner	★	2	3
	B3	Control Panel	1	✓+▲	✓+▲
	B4	Knob	★	2	3
	B5	Drip Tray	1	✓▲	✓▲
	B6	Large Cooking Grill	1	✓+▲	✓+▲
	B7	Small Cooking Grill	1	✓+▲	✓+▲
	B8	Small Cooking Griddle	★		1+
	B9	Flame Tamer/ Lava rock in basket	★	✓▲	✓▲
	B10	Warming Rack	1	✓+▲	✓+▲
	B11	Hose (if supplied)	★		
TROLLEY	C1	L/H Side Shelf	1	✓	✓
	C2	Side Shelf Shield	1	✓▲	✓▲
	C3	Front Left Endcap	1	✓▲	✓▲
	C4	Rear Left Endcap	1	✓▲	✓▲
	C5	Utensil Tray	2	✓	✓
	C6	R/H Side Shelf	1	✓▲	✓▲
	C7	R/H Insert	1	✓+	✓+
	C8	Front Left Leg	1	✓	✓
	C9	Rear Left Leg	1	✓	✓
	C10	Front Right Leg	1	✓	✓
	C11	Rear Right Leg	1	✓	✓
	C12	Bottom Slat Assembly	1	✓▲	✓▲
	C13	Base Tray	1	✓▲	✓▲
	C14	Gas Bottle Holder	1	✓▲	✓▲
	C15	Trolley Foot	1	✓▲	✓▲
	C16	Hubcap	2	✓▲	✓▲
	C17	Wheel	2	✓	✓
	C18	Locknut	2	✓	✓
	C19	Axle	1	✓	✓
	C20	Retaining Rod	1	✓	✓
	C21	Gas Bottle Strap	1	✓	✓
	C22	Side Shelf Hook	2	✓	✓
HARDWARE	D1	Countersunk Screw, M4x15	4	✓	✓
	D2	Screw, M6x15	24	✓	✓
	D3	Washer	4	✓	✓
	D4	Screw, M6x35	16	✓	✓
	D5	Screw, 1/4UNCx12	6	✓	✓


✚ Pre-Assembled Component

★ Quantity varies according to model purchased

▲ Appearance, size, and construction may differ according to model purchased


Parts Diagrams

Quantities vary according to model purchased. Specifications subject to change without prior notice. For more details on hardware, please see 'Hardware Reference Diagram.'

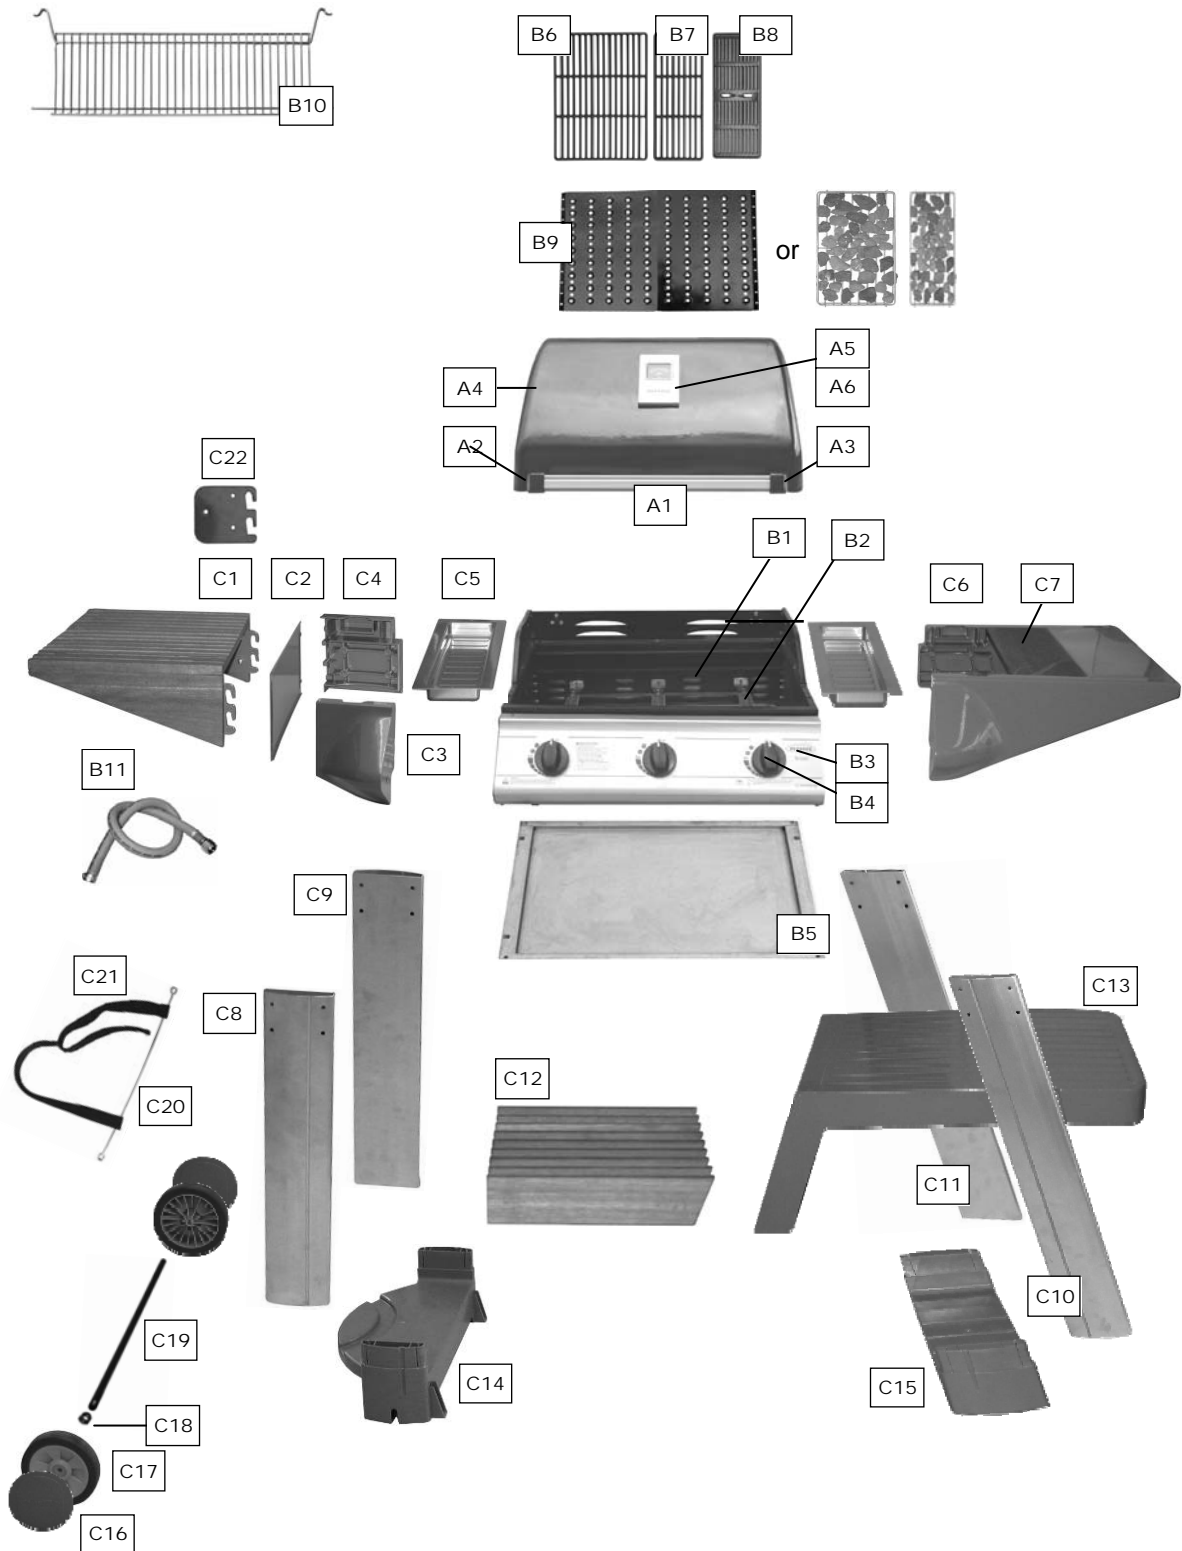

Hardware Reference Diagram


Specifications subject to change without prior notice.

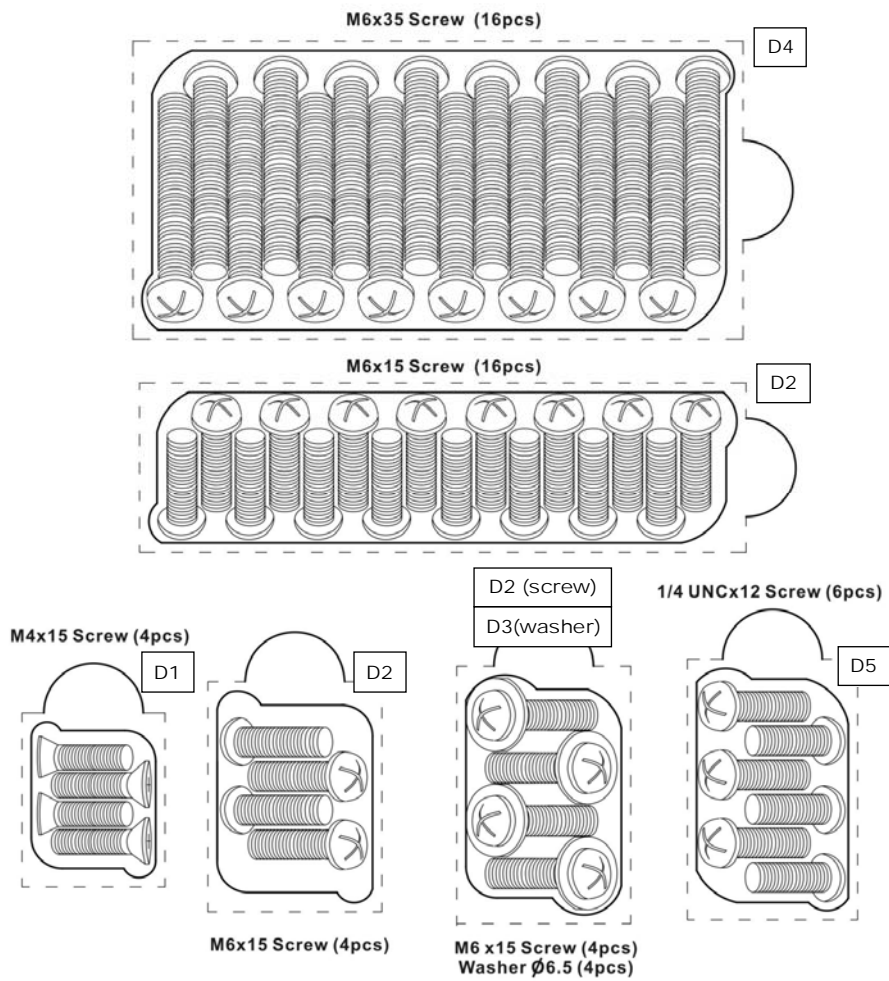

Assembly

IMPORTANT!

- **Tools Required:** Medium size flat blade or Phillips/Crosspoint screwdriver, adjustable spanner or metric spanner set
- The assembly of this barbecue requires 2 people.
- Carefully unpack the trolley box and remove all internal packaging before commencing assembly.
- Carefully remove the box lid from the body box and remove all internal packaging and parts inside the body.
- The inlet connection of the gas rail assembly on the BBQ body is lower than the body. You **must never** allow the pipe to rest on the ground during assembly as serious damage could result. We recommend the body is left sitting in the box until required for assembly to trolley.
- Whilst every care is taken in the manufacture of this product, care must be taken during assembly in case sharp edges are present.

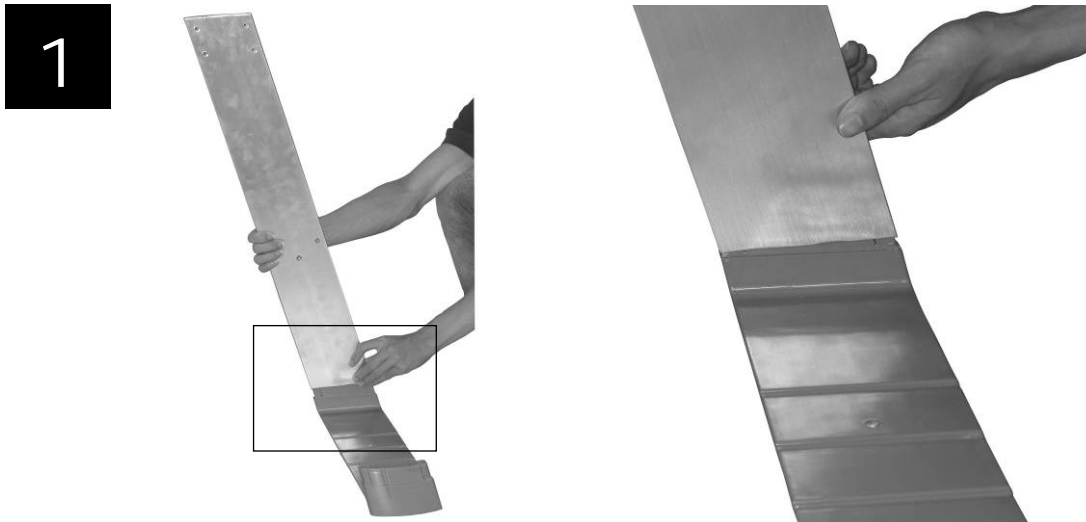

Attach the Rear Right Leg (C11) to the Trolley Foot (C15). The legs are a push fit onto the trolley foot and on the gas bottle holder. In case of difficulty, they may need tapping lightly with a soft face mallet. Take care not to damage parts.




Attach the Front Right Leg (C10) to the Trolley Foot (C15)

3




Attach the Bottom Slat Assembly (C12) to the Base Tray (C13) using the Screws (D2).

4

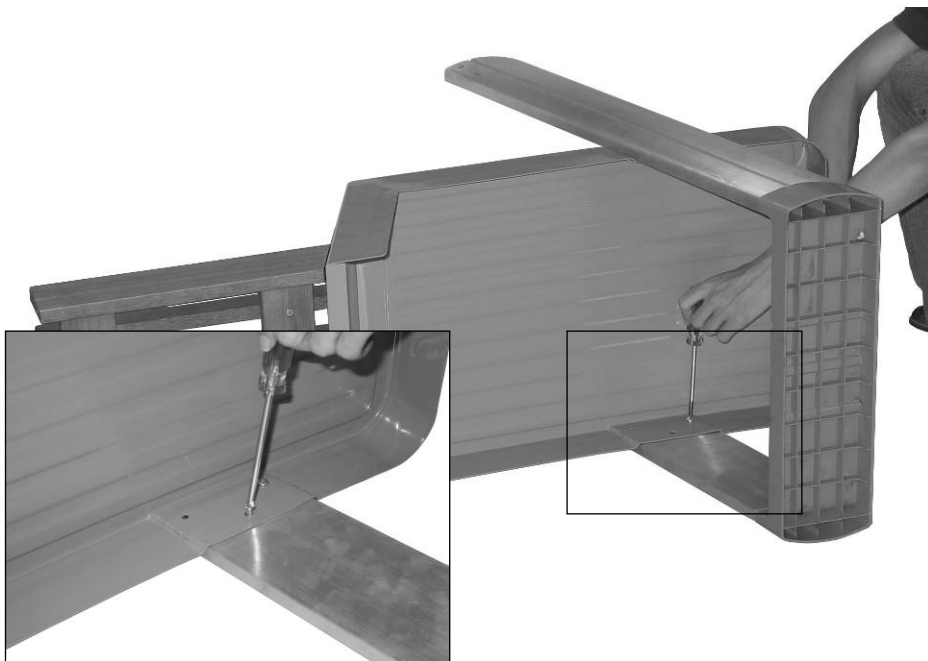


Attach the leg assembly to the Base Tray (C13) using the Screws (D2).

5

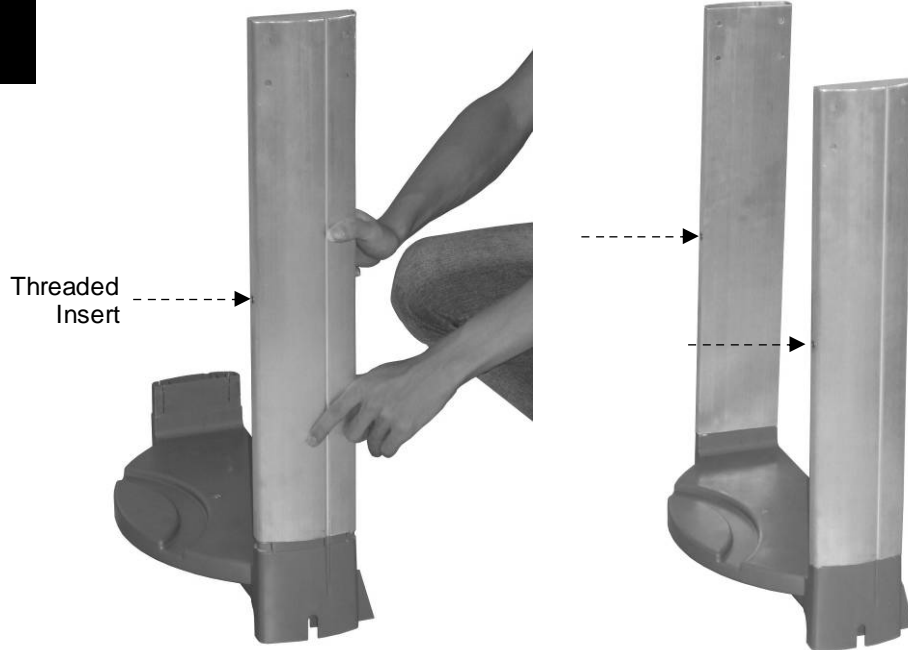


Attach the Front Left Leg (C8) and Rear Left Leg (C9) to the Gas Bottle Holder (C14).
Note: Threaded inserts must be facing in the direction shown!

6

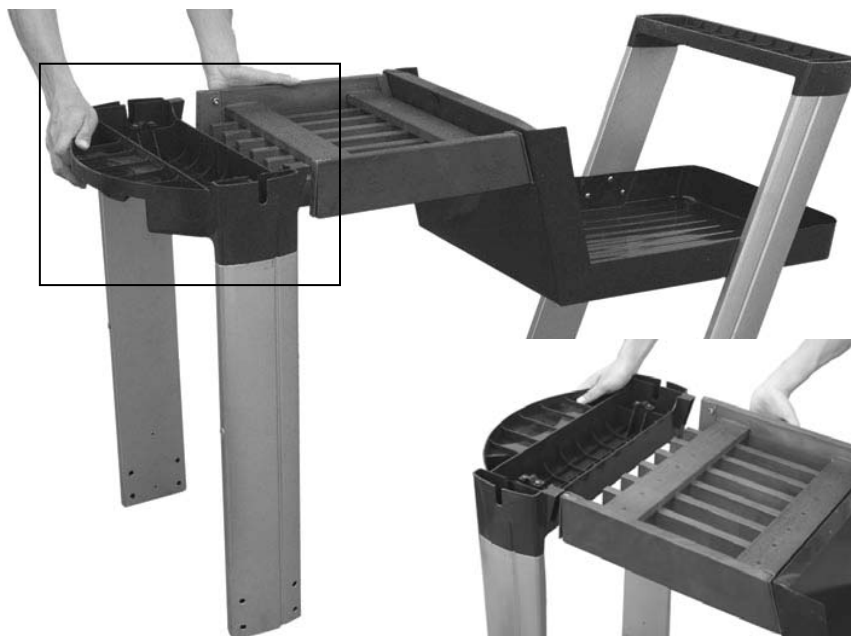

Align the Gas Bottle Holder (C14) with the Slat Assembly (C12).

7

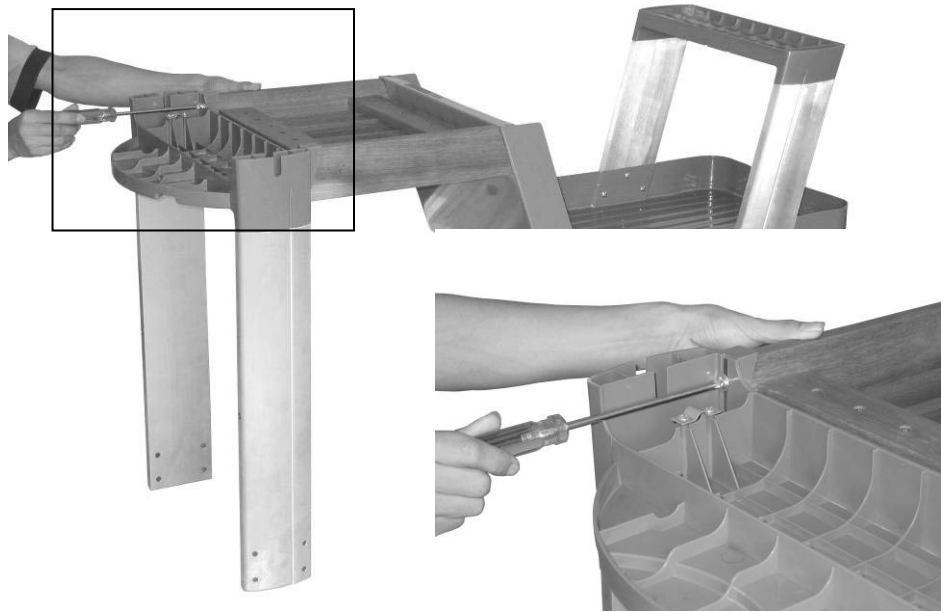


Attach the Gas Bottle Holder (C14) to the Bottom Slat Assembly (C12) using the Screws (D2) and Washers (D3).

8




Insert the Axle (C19) into the Gas Bottle Holder (C14).

9

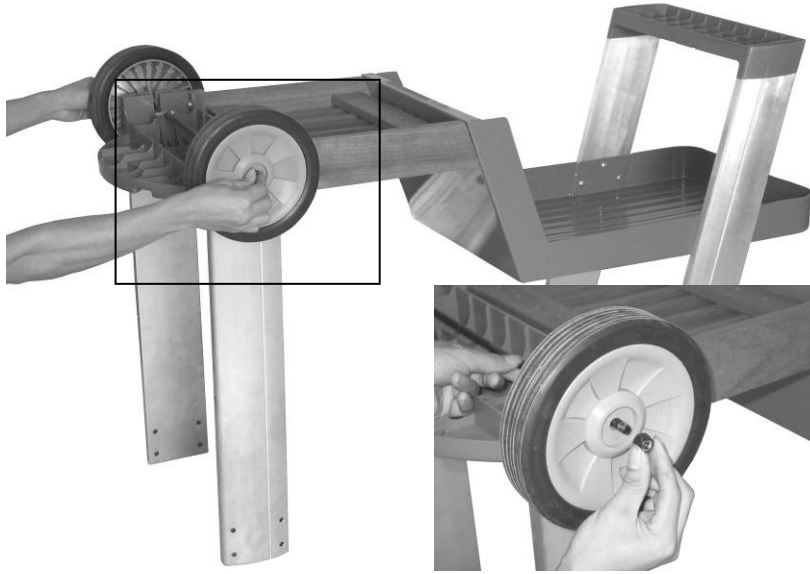


Place the Wheels (C17) onto the Axle (C19) and secure with Locknuts (C18).
Carefully turn the completed trolley over, right side up.

10

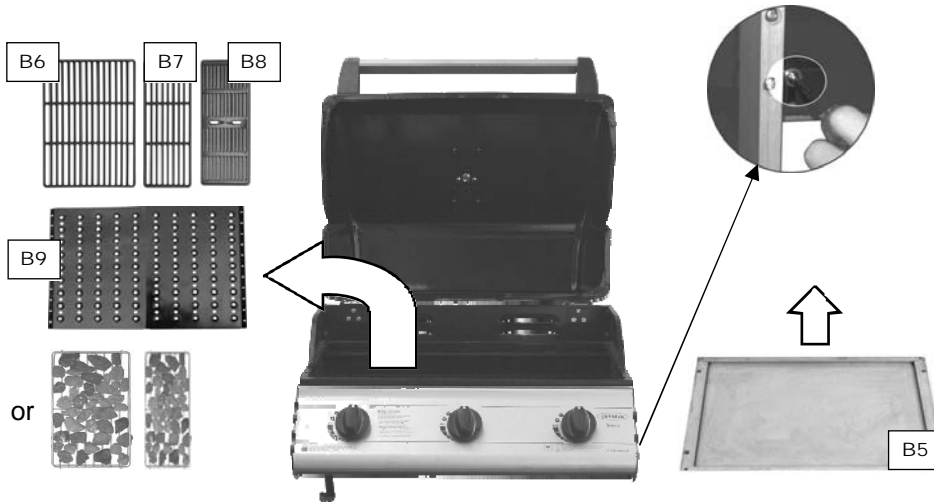

Remove all cast iron cooking components, Flame Tamer/ Lava Rock , drip tray, and any internal packaging from the barbecue body.
Note: Loosen off the bolts and move the brackets down to their lowest position. Retighten the bolts.


11

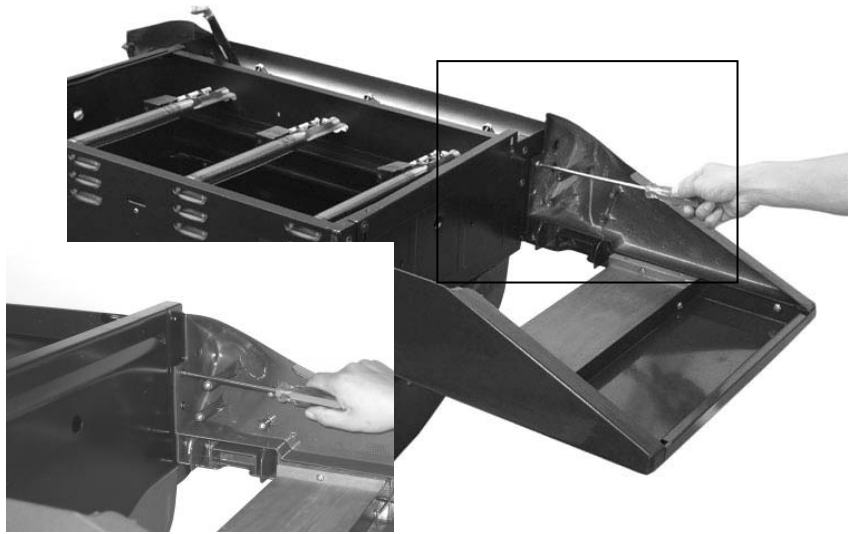

CAUTION! Care must be taken to ensure hood does not fall open unexpectedly or that the hood surface is damaged when set on the ground.

Attach the R/H Side Shelf (C6) to the Barbecue Body (B1) using the Screws (D2).

12

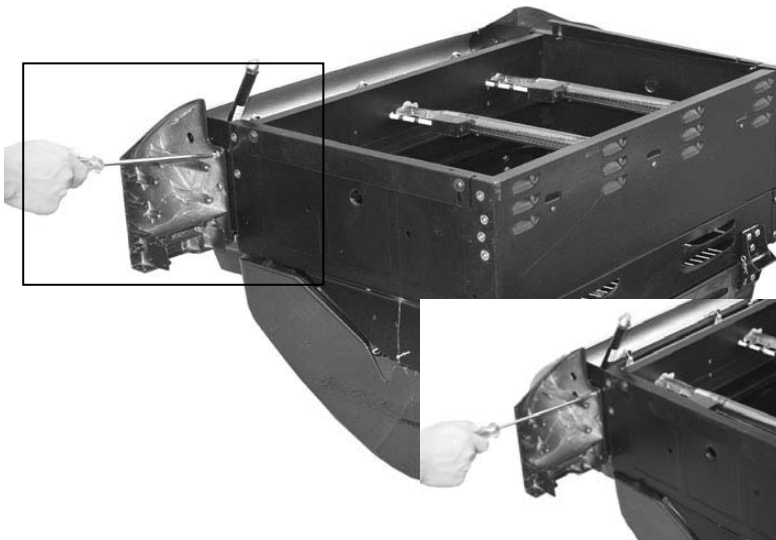

Attach the Front Left Endcap (C3) to the Body (B1) using the Screws (D2).

13



Attach the Rear Left Endcap (C4) to the Body (B1) using the Screws (D2).

14



CAUTION! Care must be taken to ensure hood does not fall open unexpectedly.

Carefully turn the Barbecue Body (B1) over right-side-up.


15



Carefully lay the Barbecue Body (B1) onto the tops of the legs. The tops of the legs should slot into the endcaps. When done correctly, the barbecue should be able to stand on its own weight.

WARNING: DO NOT RELEASE THE BARBECUE BODY WHILE THE BARBECUE HAS NOT BEEN PROPERLY SEATED. THIS MAY RESULT IN INJURY OR DAMAGE TO YOUR BARBECUE.

16

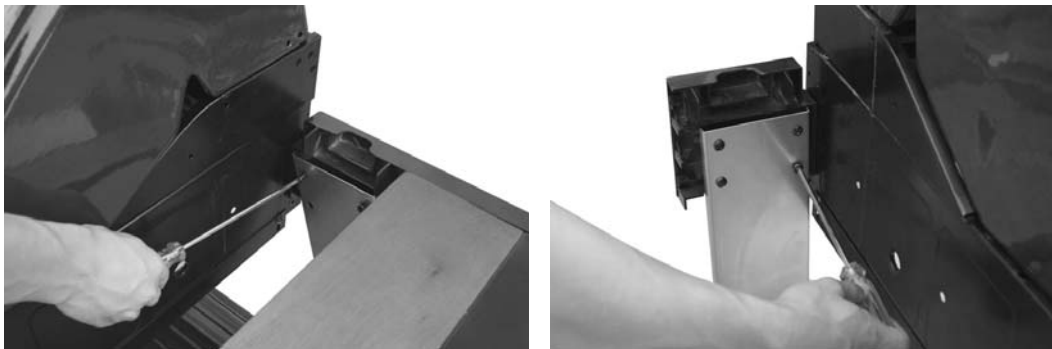


Secure the Legs (C8), (C9), (C10), (C11) to the Endcaps (C3), (C4) and the R/H Side Shelf (C6) using the Screws (D4).

17



Attach the Side Shelf Shield (C2) to the endcaps using the Countersunk Screws (D1).

18

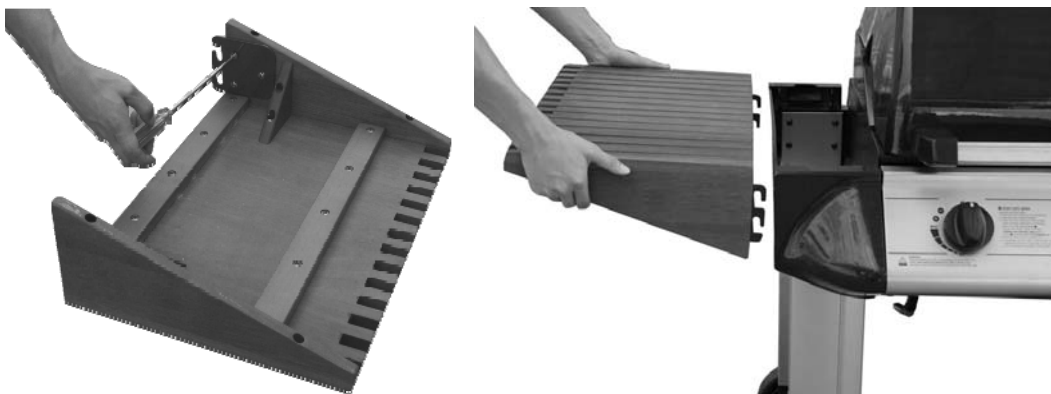


Attach the Side Shelf Hook (C22) to the L/H Side Shelf (C1) using the Screws (D5), Hook the side shelf to the endcaps.

19



Lay the Utensil Trays (C5) into their positions on either side of the barbecue body.

20

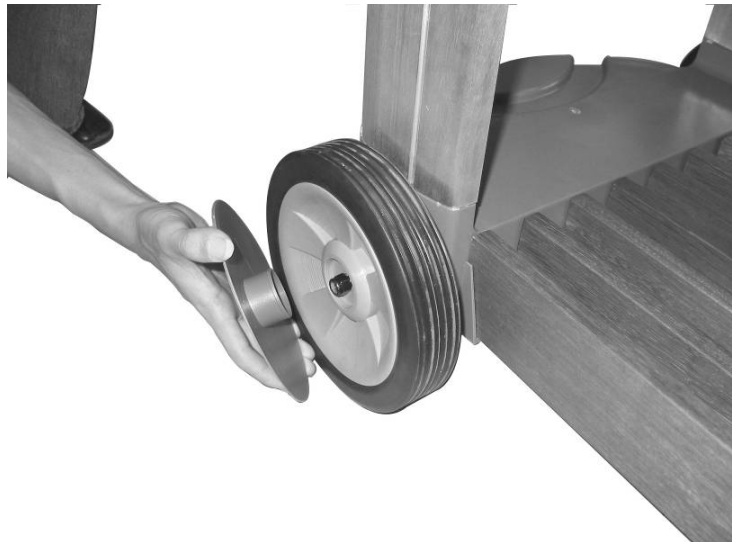

Place the Wheel Hubcaps (C16) onto the sides of the Wheels (C17).

21




Slide the loops of the Gas Bottle Strap (21) onto the Retaining Rod (C20).
Secure the Rod (C20) to the trolley legs using the Screws (D2).

22



Slide the Drip Tray (B5) into place underneath the barbecue body.

23

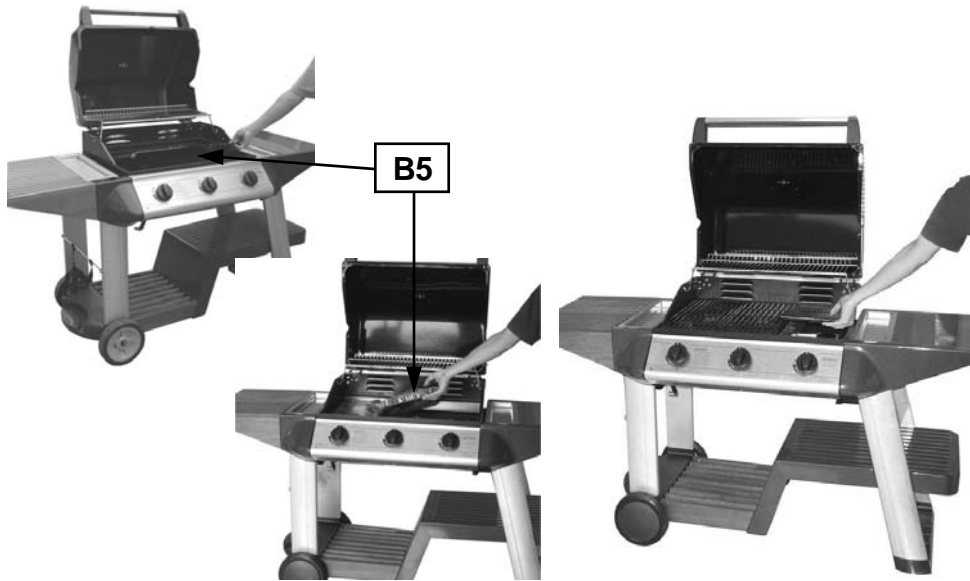

Lay the Flame Tamer/Lava Rock (B5) into the body ensuring it lies level within the body. Lay the Grills (B6, B7) and Griddle (B8) into place.

2 burner model configuration: Left — Large Cooking Grill, Right — Small Cooking Grill,
3 burner model configuration: Left — Large Cooking Grill, Middle — Small Cooking Grill,
Right — Small Griddle Plate.

**NOTE: Ensure that the lava rock lies directly underneath the grills.
No lava rock is required when using the flame tamer.**


24



Connect the gas hose (if supplied) to the BBQ. Ensure the mating faces of the connection are clean and not damaged. Do not use any sealing tape, paste, or liquid on the joint. The nut must be tightened with the use of a spanner. Do not use force which may damage the assembly.

25

Leak Test Diagram

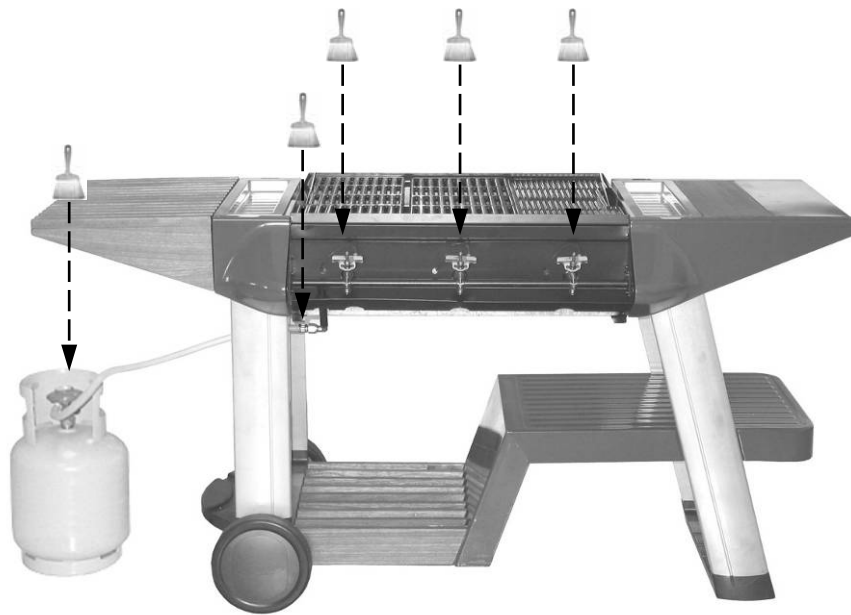

Assembly is now complete.
All joints and connections must now be **leak tested** before using the barbecue.
For details of leak testing, please refer to instructions on pages 19 / 20.

▲ ESSENTIAL INFORMATION

Please read instructions before using your barbecue.

BEFORE YOU USE YOUR BARBECUE (also see installation)

- Perform a leak test. This is the only safe and sure way to detect any gas leaking from joints and connections of the barbecue after assembly. Follow the leak test instructions on page 19. Check that the gas hose is free of any tension, twisting, cuts, or cracks.
- Make sure your barbecue is in a safe place. It must be outdoors, on level ground and not below ground level. Ensure that the barbecue is at least 1 metre away from any flammable materials, including trees and fences and that there are no heat sources near the barbecue (cigarettes, open flames, spark etc.)
- Check that you have the correct gas bottle and regulator for your barbecue and that the gas bottle is placed correctly in the gas bottle holder provided. Never place the gas bottle directly underneath the barbecue.

GETTING STARTED (also see operation)

- Open the hood of your barbecue. Never light your barbecue with the hood closed. Turn the gas regulator or gas bottle valve to the 'on' position. Push in the control knob of the burner you want to light and turn it anti clockwise until resistance is felt. Wait 4 seconds and then continue turning the control knob until a click is heard. Repeat if necessary until the burner is alight. Light all other burners in the same way making sure each burner is alight before attempting to light the next. IF ANY BURNER FAILS TO LIGHT, TURN OFF THE GAS AT THE BURNERS AND THE GAS BOTTLE, WAIT FIVE MINUTES AND TRY AGAIN. If the burners cannot be lit using the ignition system, turn to the manual lighting instructions under operation.
- Once the burners are lit, turn all the burners to the high setting for 3-5 minutes to pre-heat the barbecue. This should be done before each session. When pre-heating is complete, cooking can begin taking extra care if the burners are used in the high position.
- To prevent food sticking we recommend that you use a long handled brush to apply a light coat of cooking oil to the grills and griddles before each barbecue session.
- Flare-ups may occur during cooking and can be controlled by applying salt directly onto the Flame Tamer/Lava Rock making sure your hands are protected from the heat.
- If a fat fire should occur during cooking, and if safe to do so, turn off the burners and the gas at the gas bottle and wait for the fire to go out. Do not pull out the drip tray or douse with water.
- Never douse a barbecue with water.
- Never move a barbecue when lit.
- Never leave a lit barbecue unattended
- Never handle hot parts with unprotected hands
- Keep children, animals, and elderly people a safe distance from a lit barbecue.

WHEN YOU HAVE FINISHED COOKING (also see care and maintenance)

- Turn all the burners to the high position for 3 to 5 minutes to burn off any food residue from the cooking surfaces and burners. When the barbecue has cooled, the burnt residue can be easily removed using a damp, non abrasive cloth on the cooking surfaces and a wire brush on the burners. Never use any abrasive material on porcelain finishes. The grills and griddles are not dishwasher safe.
- We do not recommend washing lava rock, the step described above should remove most food residue from the lava rock.
- When the barbecue has cooled, scrape away any food and fat residue from the drip tray and discard. Empty and clean the Foil Liner. These routines must be completed after each session.

STORAGE

- Ensure the barbecue is properly cooled.
- Always disconnect the gas bottle and store it in a safe place, never store a gas bottle indoors or on its side.
- Store the barbecue in a cool dry place. The detachable side shelf can be removed to save space during storage.
- Cover the burners with foil to keep the burner holes free from insects or other debris.
- If you intend to leave your barbecue outside make sure it is protected from the elements by a heavy duty cover, these are available from most Outback® stockists.

IMPORTANT INFORMATION

- Modification of the barbecue may be dangerous, is not permitted and will nullify any warranty.
- This product is for outdoor use only. Do not use indoors. Do not use below ground level.
- Do not store Gas bottles below ground level. LP gas is heavier than air so if a leak occurs the gas will collect at a low level and could ignite in the presence of a flame or spark.
- Do not store or use LP gas bottles on their side as this could allow liquid gas into the supply pipes with serious results.
- Leak test your barbecue annually. Leak test the hose connections each time you reconnect the gas bottle.
- Always turn off the gas at the gas bottle when not in use.
- Do not use aerosols near this barbecue.

GAS, REGULATOR AND HOSE

This barbecue can run on propane butane or butane/propane mixed LPG (liquid petroleum gas) bottled gas. For optimal performance we recommend the use of propane gas which is supplied under a number of different names and bottle colours. Butane gas can be used but it may restrict the heat output available from the burners, particularly when the gas temperature falls below +10 degrees Celsius. If in doubt, please consult your gas dealer/distributor.

Hose

- Check that the gas hose does not touch any part of the barbecue that may become hot during operation.
- If the hose shows any sign of damage it must be replaced with a hose that is suitable for use with LPG (liquid petroleum gas) and meets the National Standards for the country of use.
- The length of hose should not exceed 1.5 metres.

Please note: the date on the orange hose (if supplied) is the date of manufacture – not the expiry date.

You must have the correct gas bottle, regulator, and hose for the barbecue to operate safely and efficiently. Use of an incorrect or faulty regulator is dangerous and will invalidate the warranty on this product. If you are unsure, please check with your local gas dealer.

INSTALLATION

Precautions:

- Only use this barbecue in a well-ventilated outdoor area.
- Check that the barbecue is not placed UNDER any combustible surface.
- The sides of the barbecue should never be closer than 1 metre to any combustible material.
- Do not obstruct any ventilation openings in the barbecue body
- Confirm all control knobs are in the off position before connecting the regulator.
- When changing the gas bottle, the gas bottle must be kept away from any sources of ignition.
- Always connect the regulator in accordance with the regulator and gas bottle suppliers instructions

LEAK TESTING

Always perform a leak test in a well-ventilated area.

Step 1 - Confirm all control knobs are in the off position.

Step 2 - Detach the barbecue control panel located across the front of the barbecue body by pulling off the control knobs and removing the control panel retaining screws.

Step 3 - Turn on the gas at the gas bottle or regulator

Step 4 - Check for leaks by brushing a solution of ½ water and ½ liquid detergent over all the gas system joints, including all valve connections, hose connections, and regulator connections.

Step 5 - If bubbles form over any of the joints there is a leak

- Turn off the gas
- Retighten all joints
- Repeat test
- If bubbles form again do not use the barbecue and contact your local Outback distributor for assistance.

OPERATION

Your barbecue is not designed to be used with more than 50% of the cooking area as a solid plate – this includes baking dishes. If more than 50% of your cooking area is covered by a solid cooking surface, the barbecue could overheat causing damage that is not covered by warranty.

Grill cooking

The burners heat the Flame Tamer/Lava Rock beneath the grill that, in turn, heats the food. The natural juices produced during cooking fall onto the Flame Tamer/Lava Rock and vaporise to form smoke. The smoke then rises and 'bastes' the food, giving it that unique barbecued flavour.

Griddle plate cooking

The burners heat the griddle plate directly, which then cooks the food on contact. Griddle plates enable the cooking of smaller items that would, otherwise, fall through the grill. They can also be used for searing cuts of meat or cooking food like eggs that would not be possible to cook on a grill. Griddles can also be used to heat pans.

Roasting (hooded barbecues only)

Your barbecue is supplied with a roasting hood rather than a lid, so you are able to roast or bake in a similar way as in a conventional gas oven. For best results place the food you wish to bake or roast in a metal baking tray and set it on one side of the cooking grill. Turn the burners directly under the food to the 'OFF' position and the burners opposite the food to the 'Medium' setting. Close the hood and this will form an oven to cook the food 'indirectly'. Monitor the temperature using the heat indicator on the hood. If the internal heat becomes too high, turn the burners to the 'low' position. It is not necessary or advisable to have all of the burners on high when the hood is closed. If the hood is opened during cooking to check on the progress of the food, please allow extra cooking time for the barbecue to regain its temperature. Take care when opening the hood as hot steam can be released on opening.

Warming Rack

Warming racks are a convenient way to keep cooked food warm or to warm items such as bread rolls. It is advisable to place food to the front of the warming rack to avoid the possibility of juices and fat running down the back of your barbecue. Always check that your warming rack is properly fitted before use.

Flare-up control *Very Important Notice *****

Flare-ups occur when meat is barbecued, and its fat and juices fall upon the hot lava rock. Smoke of course helps give food its barbecued flavour, but it is best to avoid excessive flare-up to prevent food being burned. To control flare-ups, it is **ABSOLUTELY ESSENTIAL** to trim away excess fat from meat and poultry before grilling, use cooking sauces and marinades sparingly and try to avoid very cheap cuts of meat or meat products as these tend to have a high fat and water content. Also, the burners should always be placed on the low setting during cooking. When flare-ups do occur, they can usually be extinguished by applying baking soda or salt directly onto the lava rocks. Always protect your hands when handling anything near the cooking surface of the barbecue, and take care to protect yourself from the flames. Always protect your hands when handling anything near the cooking surface of the barbecue and take care to protect yourself from the flames. If a fat fire occurs, please see the instructions under the following heading of this manual.

Fat Fires

The Foil Liner must be emptied and the drip tray cleaned of food debris after each cooking session. If the barbecue is to be used for large gatherings, it will be necessary to turn off and cool the barbecue every two hours to remove food debris from the drip tray and clean out the Foil Liner, the time between cleaning may need to be reduced if very fatty foods or cheap meat products are being cooked. Failure to do this may result in a fat fire, which may cause injury and could seriously damage the barbecue.

In the event of a fat fire.

In the event of a fat fire;

- If safe to do so, turn all control knobs to the 'off' position
- Turn off the gas at the gas bottle
- Keep everyone at a safe distance from the barbecue and wait until the fire has burnt out.
- Do not close the hood of the barbecue.
- NEVER DOUSE A BARBECUE WITH WATER. IF AN EXTINGUISHER IS USED, IT SHOULD BE A POWDER TYPE.
- DO NOT REMOVE THE DRIP TRAY
- If the fire does not seem to be abating or appears to be worsening, contact your local Fire Brigade for assistance.

Manual ignition instructions

- Insert a long, lit match through the match-lighting hole in the right hand side of the body of the barbecue until the lit end is alongside the right hand burner. Push and turn the right hand control knob anti-clockwise to the high position taking care to protect yourself from flames.
- When the burner is lit turn the remaining burners from right to left.
- Confirm that each burner is lit before turning on the next burner
- **If the right hand burner fails to light, turn off the gas and contact your local Outback dealer.**

CARE AND MAINTAINANCE

▲ Never handle hot parts of the BBQ with unprotected hands.

▲ Never douse the BBQ with water when its surfaces are hot.

General

- Regularly clean your BBQ between uses and especially after extended periods of storage.
- Do not leave the BBQ uncovered and exposed to the elements when not in use. Heavy duty covers are available as an accessory from your Outback ® stockist. Even when stored outside or inside with a cover it is possible for mould to grow on any fat remaining on parts of the BBQ. This should be cleaned off smooth surfaces with hot soapy water.
- Flame Tamer / Lava Rock can be cleaned by lighting the burners on full for 3 to 5 minutes. This should be done with the lid in the raised position. Heavily impregnated Flame Tamer / Lava Rock should be turned over so that the dirty side faces the burners in order to burn off any residue.
- The wooden shelf, shelf insert and bottom slats are made from hardwood ideally suited to outside conditions. Hardwood will naturally weather and change its appearance and it is quite natural for small cracks to appear on the surface of the wood. The wood should be regularly inspected and any weathered or damaged surfaces should be recoated promptly with Yacht varnish or an external grade Polyurethane varnish. Follow the varnish manufacturer's instructions for preparation and application.
- All screws and bolts should be checked and tightened if necessary on a regular basis.

Burner

Provided that they are operating correctly, in normal usage, burning off the residue after cooking will keep the burners clean. The burners should be removed and cleaned annually, or whenever heavy build-up is found, to ensure that there are no signs of blockage (debris, insects) in either the burner portholes or the primary air inlet of the burners. Use a pipe cleaner to clear obstructions. When refitting the burners, be careful to check that the neck of the burner fits over the valve outlet.

Cleaning

<i>Material</i>	<i>Where used</i>	<i>Cleaning Method Recommended</i>
Porcelain enamel	Grills Griddles Hood	Enamel is a thin, glass based coating fused onto metal and as such needs to be treated with care. Cooking oil, together with fat from food being cooked can turn to carbon as a result of heating and result in black flakes coming away from the cooking surfaces. These are not harmful. Porcelain should be cleaned using hot soapy water or with the use of a suitable cleaning product following the manufactures instructions. Due to the weight of the grills and griddle, we do not recommend cleaning in a dishwasher.
Chrome plated	Warming rack	Wash with hot soapy water. A chrome cleaner may be used if required. To prevent rusting, wipe with cooking oil after rinsing and drying.
Wood	Shelves and shelf inserts	Wipe with a cloth wrung out in hot soapy water and dry.
Plastic Paint	wooden shelving wooden shelving Body Utensil trays	Wipe with a cloth wrung out in hot soapy water and dry. Excess fat and food debris can be removed from inside the body using a plastic or wooden scraper. Do not use abrasives. If rust appears on the body it should be treated with a suitable rust inhibitor and painted with a heat resistant paint.
Galvanised steel	Drip tray Foil Liner	<p>Excess fat and food debris must be removed using a plastic or wooden scraper. This needs to be carried out between each use of the BBQ. Excessive build up is likely to lead to a fat fire which can be hazardous and damage the BBQ. This is not a fault in the BBQ and therefore is not covered by the terms of the warranty.</p> <p>If required, the tray and foil liner can be washed in hot soapy water.</p>
Stainless Steel	Burners	<p>Any food debris should be removed on a regular basis.</p> <p>For detailed burner instructions refer to MAINTENANCE on Page 21.</p>

Troubleshooting

<i>Problem</i>	<i>Possible Cause</i>	<i>Solution</i>
Burners will not light using the ignition system	LP gas bottle is empty	Replace with full gas bottle
	Faulty regulator	Have regulator checked or replaced
	Obstructions in burners	Clean burners
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Electrode wire is loose or disconnected on electrode or ignition unit	Reconnect wire
	Electrode or wire is damaged	Change electrode and wire
	Faulty integral ignitor	Change ignitor
Burner will not light with a match	LP gas bottle is empty	Replace with full gas bottle
	Faulty regulator	Have regulator checked or replaced
	Obstructions in burners	Clean burners
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Incorrect electrode gap/ Bent collector box	The gas collector box around the electrode needs to be in line with the burner with a gap of 3 to 4mm between the end of the electrode and the tag on the end of the collector box. Realign the collector box as required.
Low flame or flashback (fire in burner tube - a hissing or roaring noise may be heard)	LP gas bottle too small	Use larger gas bottle
	Obstructions in burners	Clean burners
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Windy conditions	Use BBQ in a more sheltered position
Gas valve knob difficult to turn	Integral ignition system jammed	Replace integral ignitor
	Gas valve jammed	Replace gas valve

Technical Specifications

Model Name	CE Approval	Heat Input	Burners	Injector Size	Gas /Pressure
Outback® Mayfair / Tungsten	0359 359AS128	7.87kW	2	1.04	Butane/ 28mbar Propane/ 37mbar
Outback® Spirit / Titanium	0359 359AS128	11.8kW	3		Butane/Propane 30mbar
					Butane/Propane 50mbar
					Butane/Propane 36mbar

Countries of Use:

I₃₊ (28-30/37) BE, CY, CZ, EE, FR, GR, IE, IT, LV, LT, LU, PT, SK, ES, CH, GB, RO

I_{3B/P(30)} BG, CY, CZ, DK, EE, FI, GR, LV, LT, LU, MT, NL, NO, SK, SI, SE, TR, IS

I_{3B/P(50)} AT, DE, HU, SK, CH

I_{3B/P(36)} PL

For reference and correspondence, record your serial number here.
(See sticker on side of barbecue body.)

Serial No. _____

This number may be required when ordering spare parts or accessories.
A part reference number may also be required where applicable.

Published December 2007